




UNOPAX®
Shortcut to Excellence




Installation
Table of contents
MOM documentation






Content models



MINI SLIM

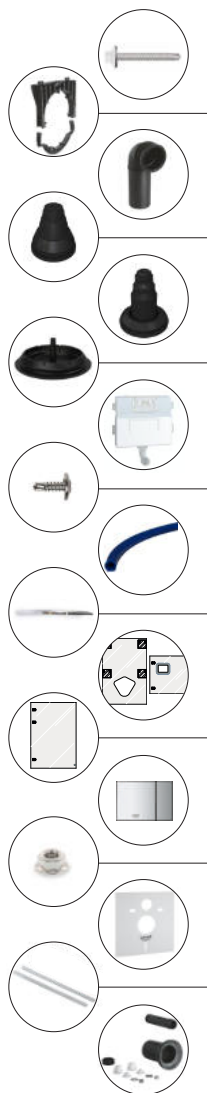

Article no.	Article name	MINI SLIM
a 41504806071	Screws with gasket for mounting cabinet	8
b 42243000	Pipe clamp	1
c 42327000	Rapid SL Bend, 90 degrees	1
d 5117301	Pipe Sleeves UNI (12-34)	10
e 33401	Pipe Sleeves (8-20)	2
f 5051169	Sealing plug	2
g 39681000-1	Cistern	1
h 100383	Screws for mounting the cistern and rails, 13 x 4,2	6
i 11301-04	Blue hose 1 m x 4 mm <small>(Replaces existing hose between the cistern / push button)</small>	1
j TRB-010-0105	Rails for mounting technical equipment	2
k UNO-20/30	Small glass door and bottom glass	1
l UNO-10	Big glass door	
m 39681000-2	Push button	1
n	M4 flange nut	4
o 37131000	Noise protection	1
p 4276400M	Mounting bolt for WC, 2 pcs	1
x 37311K00	In / out connection set Grohe	1

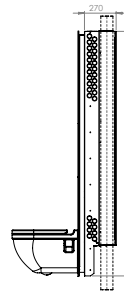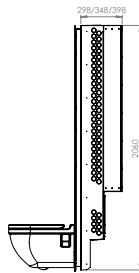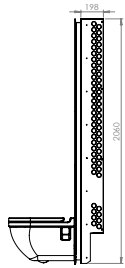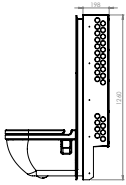

MINI

MAXI / BACKDOOR

MAXI BP 100/150/200

MAXI SHAFT 300

MONO

MINI	MAXI / BACKDOOR	MAXI BP 100/150/200	MAXI SHAFT 300	MONO
8	16	16	16	8
1	1	1	1	
1	1	1	1	
10	20	30	20	10
2	2	2	2	2
2	2	2	2	2
1	1	1	1	
6	6	6	6	2
1	1	1	1	
2	2	2	2	2
1	1	1	1	
	1	1	1	1
1	1	1	1	
4	4	4	4	
1	1	1	1	
1	1	1	1	
1	1	1	1	




Installation + video guide




1. Mounting in wall posts





2. Secure right debt

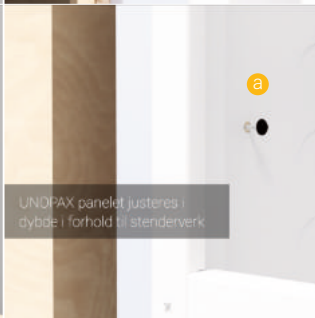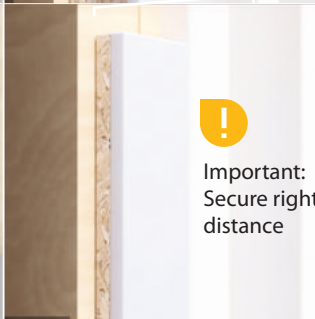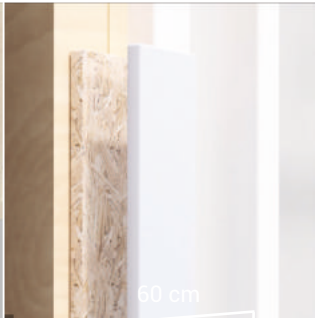

3. Blocking to pipes

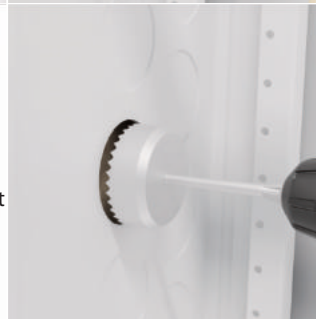


4. Installation of rubber gaskets

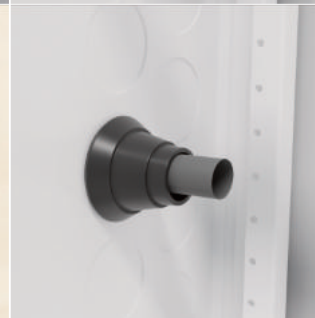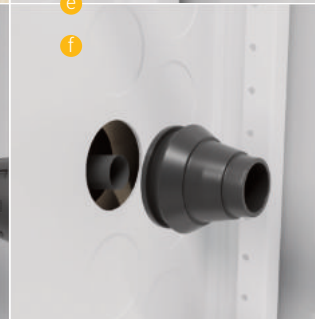

5. Mounting of wall panels



The unopax panel is adjusted in depth in relation to the wall post and layers of wallplates

 = Be extra alert!

6. All cabinet screws must be fitted

7. Mounting of Cistern

8. Membrane is mounted

9. Bottom glass, small and large glass door are installed

10. Mounting of toilet



i Remember screws on backside bottom of panel

MANAGEMENT OPERATION AND MAINTENANCE

THIS DOCUMENT IS A GENERAL FUNCTION, OPERATION AND MAINTENANCE GUIDE

WARRANTY

Unopax AS provides a guarantee according to contract for the construction and execution of the distribution cabinet. (Unopax). For the guarantee to apply, the recommendations in this MOM document must be complied with. In the event of faults or defects, which are to be rectified on the warranty, the inquiry must be directed to UNOPAX AS before the repair is carried out. If errors or deficiencies have been rectified or have been rectified by others without a written agreement, the guarantee lapses.

UNOPAX DISTRIBUTION CABINET

The distribution cabinet is built up of a steel frame with colored tempered glass front. The glass front consists of bottom glass, small glass door and large glass door. Behind the bottom glass, the cistern / water tank of the toilet is mounted. Small, - and large glass door can be opened. Behind these there is space for complete water and heat distribution to the entire home. Should there be a leak from the cistern or manifolds, the water will drain out under the bottom glass and be visible on the wet room floor. If this happens, the toilet and the glass front are easily removed.

GENERAL PRECAUTIONS FOR USE BY UNOPAX

The product should be used for only what it was originally designed for. No elements must be subjected to abnormal external stresses. This could be blows with hard objects or materials that can damage or scratch the surfaces.

GENERAL PRECAUTIONS FOR CLEANING UNOPAX
Elements and surfaces must only be cleaned with suitable cleaning agents and methods.

Remember to follow the instructions of use for the products used. Glass front can be cleaned with glass or window wash. Wipe the edges with a soft, dry cloth.

DISASSEMBLY OF THE GLASS FRONT

If there is a need for service or repair of the cistern, the glass front is easily dismantled as follows:

- Remove the bolts securing the toilet, carefully lift the toilet off and place it on a soft surface
- Remove Pneumatic hose from push button
- Carefully lift off the large glass door and place it on a soft surface
- Carefully lift off the small glass door and place it on a soft surface
- Carefully lift off the bottom glass and place it on a soft surface

The cistern is then ready for service or replacement without affecting other constructions.

The large glass door, small glass door, bottom glass and toilet are reassembled by following the points above in reverse order.





UNOPAX®

Shortcut to Excellence

info@unopax.no
www.unopax.no
+47 47 87 07 70

Visiting address:
Holthesvei 2
4848 Arendal

Mail address:
Bjørnstadmyra 7
1712 Grålum